

## HardFloor Floor Maintenance

### After Installation of the Floor

- Maintain room temperature at 65 degrees Fahrenheit for 48 hours after installation is completed.

### Protection for your Floor

- When moving appliances or heavy furniture, lay a plywood panel on your floor and "walk" the item across it. This protects your floor from scratching.
- Use Floor Protectors on furniture to reduce damage
- Be careful with rolling casters. They can damage the floor.

### General Maintenance

Wipe up spills immediately. Vacuum, sweep or dust mop your tile/ stone floor once a week, or more, if needed. The vacuum head must be brush or felt, and a wand attachment is preferable

As for daily cleaning and maintenance.

- Remove dust and sharp dirt regularly with dust wiper and/or vacuum cleaner.
- Always avoid the use of excessive water / moisture.

**\*\*\*Always follow manufactures written instructions for floor maintenance**